


## Installation Area Requirements

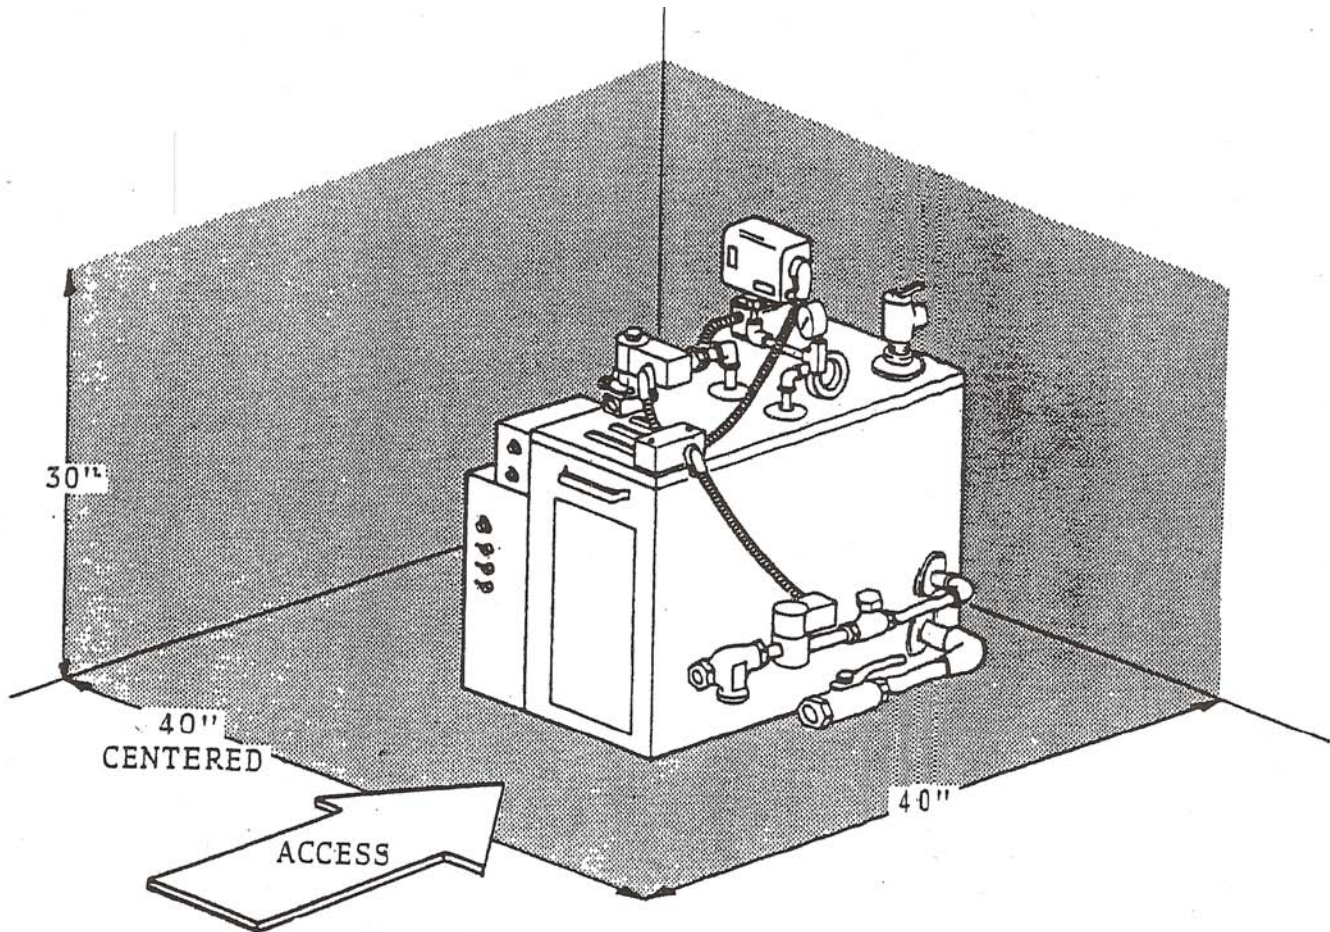

**Select a location for mounting the Steam Generator that is accesible for the installation and service. The above service area indicates the minimum space required for convienient access.**

**CAUTION: ALL MODELS MUST MUST BE NSTALLED INDOORS., IN A DRY, NON FREEZING LOCATION AWAY FROM FLAMMABLE MATERIALS SUCH AS: GASOLINE, PAINTS, THINNERS, CHLORINE, ETC.**